




Clear and Simple Quick Start Guide

SAMSUNG
Galaxy S8

Getting to know your Galaxy S8

Unlocking your phone

1. Press the Power/Lock key on the side of the phone and swipe up on the screen.

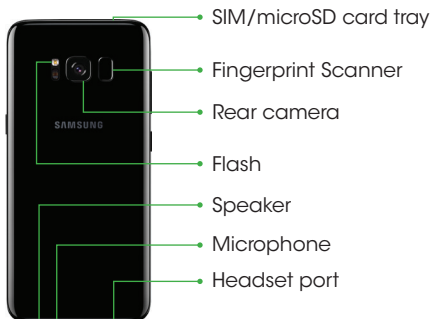


Phone setup

Inserting SIM card

1. Hold the phone securely.
2. Use the tool that came with your phone to open the SIM/microSD™ card tray.
3. Carefully place the SIM card into the tray with the carrier logo facing up.
4. Insert the optional microSD™ card (not included) with the gold-colored contacts facing down.
5. Gently push the tray back into place.
6. Charge your phone.

microSD card slot

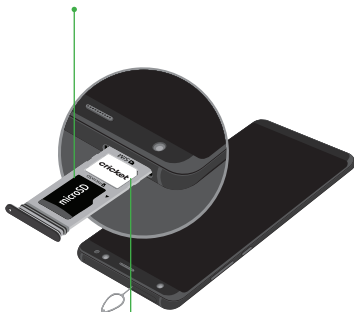

SIM card slot

Touch screen


Navigating your phone

- Use your fingertip to lightly touch the screen.
- Use quick flicks of your finger on the touchscreen to swipe up, down, left, and right.
- From the Home screen swipe up or down to access apps.
- Tap **Recent**  to view recently viewed apps.
- Tap **Back**  to return to the previous screen.
- Tap **Home**  at any time to return to the main home screen.
 - Press and hold the **Home** key to launch Google Now.

Notification panel

The Notification panel provides quick access to alerts including new messages, emails and software updates.


- Touch the Notification bar and drag your finger down to see the Notification panel.
- Swipe down to display Quick settings.
- Swipe right to clear individual notifications or tap **CLEAR ALL** to clear all notifications.

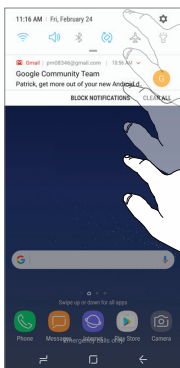

Personalize

Tap and hold a blank space a home screen and tap:

- **Wallpapers and themes:** Change the look of the Home and Lock screens with a variety of wallpapers and themes. You can also customize icons and the **Always on Display** screen.
- **Widgets:** allows you to quickly access the Widget tab where you can drag and drop a widget on a selected screen.
- **Home screen settings:** customize the look of the Home screen.

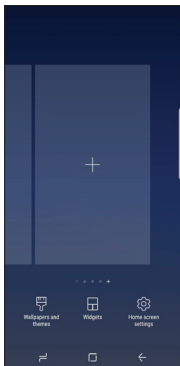


Organizing home screens

- To move a widget, shortcut or folder, touch, hold and drag it to a new location.
- To delete a widget, touch and hold and tap  Remove.
- To add a home screen, place two fingers on the screen and pinch them together to enable edit mode. Scroll to the right (a screen displays with a plus sign), and tap .
- To delete a home screen, tap and hold the screen and tap  in the upper right corner.

Hello Bixby

To launch **Hello Bixby**, press the **Bixby** key.


Hello Bixby allows you to quickly set reminders, create voice dictation, search and access content on your phone and on the internet.

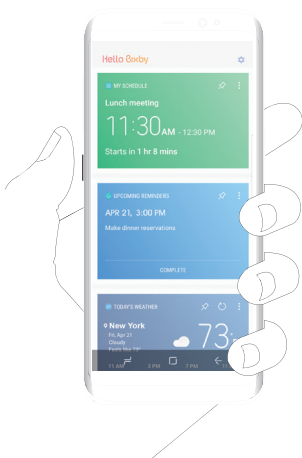

Messages

Send a message

1. From the home screen, tap **Messages**  > **New message** .
2. Tap **COMPOSE** to compose a message.
3. Enter a phone number or contact name in the **Recipient** field, or tap  to select contacts from your address book.
4. Tap the **Enter message** field and enter your text.
 - Tap  **Attach** and select an attachment.
 - Tap  **Emoticons** to choose an emoticon.
5. Tap **SEND** to send the message.

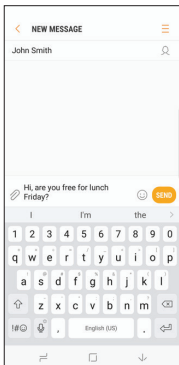


Please don't text and drive.

Email


Email setup

1. From the home screen, swipe up for **Apps**, and then tap **Email** .
2. Enter an email address and password and then tap **SIGN IN**.

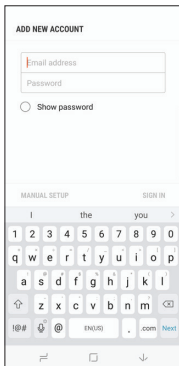

Create and send an email message

1. From the home screen, swipe up for **Apps**, and then tap **Email** .
2. Tap  to compose a message.
 - Enter an email address or name.
 - Enter a subject.
 - Enter a message.
 - Tap **ATTACH**, to attach files.
3. Tap **SEND** to send message.

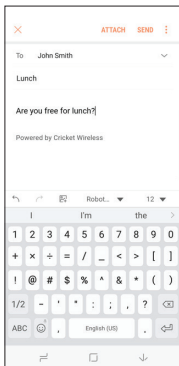

Note: To set up your corporate email, contact your IT administrator.

Cricket services

These services make using Cricket even better and easier!



My Cricket: Access billing, make a quick payment, view usage and access support from the palm of your hand.



Cricket Visual Voicemail: Quickly view, access and play back your voicemail messages, easily save important numbers to your Favorites lists and respond to messages by calling back or texting.



Deezer: Listen on-the-go with ad-free streaming music, download your favorites to your phone and get customized playlists based on your preferences.

Apps on Google Play™


Access Google Play

1. From the home screen, swipe up for **Apps** and then tap **Play Store** .
2. Use your existing Google™ account or create one following the steps on the screen.

Navigate Google Play

From Play Store, you have multiple ways to search for apps, games and more.

1. Tap a category to browse popular APPS & GAMES or MOVIES, MUSIC, BOOKS.
2. Tap the Google Play search bar to search for content.
3. To install, tap the app and follow instructions.

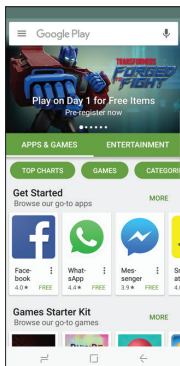

Note: A Google Checkout payment method is required to purchase apps.

Camera and video

Take a Picture

From the home screen, tap **Camera** .

- Tap  to take a photo.
- Drag  left or right to zoom in or out.
- Tap  or swipe up to take selfies.
- Swipe right to select a shooting mode.
- Swipe left to select a shooting effect.

Record a Video

From the home screen, tap **Camera** .

- Tap  to start recording.
- Tap  to capture a picture while recording.
- Tap  to pause recording.
- Tap  to end recording.

Share a Picture or Video

1. After taking the picture, tap the Image viewer at the bottom right of the screen,
2. Select the photo you want to share and then tap Share .
3. Select the desired option to share your photo and follow the prompts.

Note: Double tap the Power/Lock button to quickly launch the camera.

More information

On the web

Detailed support information, including device specifications and full user manual, are available at [**www.cricketwireless.com/support/devices**](http://www.cricketwireless.com/support/devices).

On the phone

- Call Customer Care at **1-855-246-2461**
or
- Dial **611** from your phone

Accessories

Cricket offers a full line of accessories. For more information, go to [**www.cricketwireless.com/shop/accessories**](http://www.cricketwireless.com/shop/accessories) or visit your local Cricket retailer.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID A3LSMG950U. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Android, Google and Google Play are trademarks of Google, Inc. © 2017 Samsung Electronics America, Inc. Samsung and Galaxy S, are both trademarks of Samsung Electronics Co., Ltd. Screen images simulated. Appearance of device may vary.

© 2017 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC.

